


BMD adaptors are used to connect BMD gauges with smaller threads to BMD accessories with larger threads.

Model SP: With protective bore (fracture protection for the plug gauge). Dimension X = distance between plane surface of plug thread and the adapter threads.

In addition to the adaptors, depth extensions TV4 and TV3,8 also function as adaptors.

Please note: When using adaptors, it is important to ensure sufficient indicator pressure, especially with adaptors for BMD series 4

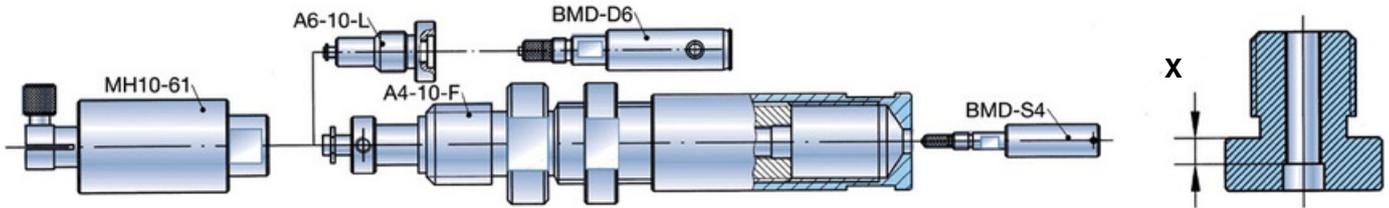

Adaptors for Series 4 BMD


A4-6

Series 4 to Series 6 adapter

The adapter is designed to be used for BMD-PA as well.

X = 1

Adapter with supplementary fracture protection available
Order Code A4-6-SP

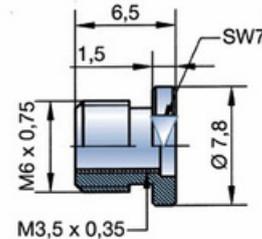


A4-10

Series 4 to Series 10 adapter

Please note: This adapter is not suitable for use with series 10 accessories with transfer pins (e.g. TV15 or MH10-150).

X = 3

Order Code A4-10

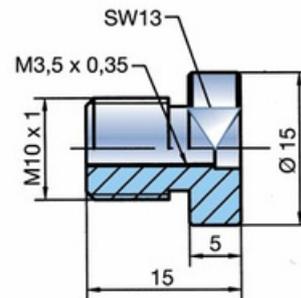

A4-10-F


Series 4 to Series 10 adapter with adjustable spring pressure

Series 4 BMD require a measuring pressure of 0.3 – 0.4 N. A spring in the adapter (1) counteracts the indicator gauging pressure. Spring pressure can be flexibly adjusted by turning sleeve B toward threaded pin A. The sleeve (3) serves as fracture protection and as a depth stop. It can be adjusted continuously from 0 to 20.5 mm. The sleeve is secured with the lock nut (2).

Please indicate dimension Ø D in orders.

Example: A4-10-F-D=7.2

Order Code for separate sleeve (3): A4-10-F-RH

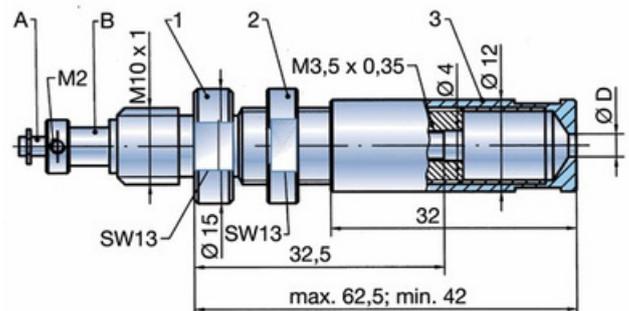

Adaptors for BMD series 6

A6-10-L

Series 6 to series 10 adapter with transfer pin


This adapter is generally recommended for adapting from Series 6 to Series 10:

- The transfer pin permits the use of all series 10 accessories.
- BMD series L

Select model A6-10-L-PA for use with BMD-PA (not shown in illustration).

X = 3

Adapter with supplementary fracture protection available
Order Code A6-10-L-SP

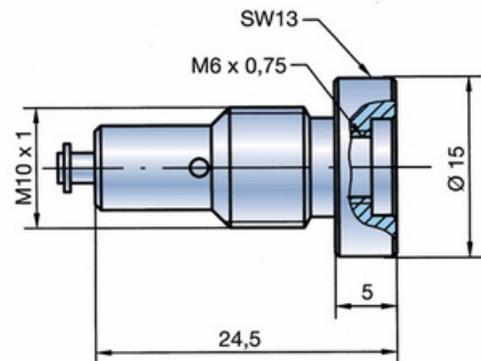


A6-10-0

Series 6 to Series 10 adapter

Please note: This adapter is not suitable for use with Series 10 accessories with pressure pins (for instance TV15 or MH10-150).

X = 3

Adapter with supplementary fracture protection available
Order Code A6-10-0-SP

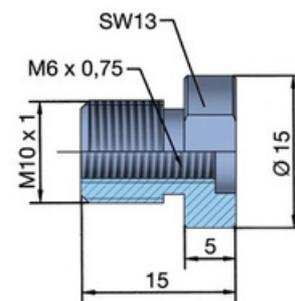

A6-6-F

Adapter for series 6 BMD with adjustable spring pressure

The spring pressure can be adjusted flexibly by turning the sleeve (1). The sleeve is secured with the lock nut (2).

